

## IMPORTANT SAFEGUARDS

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid a hazard.

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following.

“DO NOT COVER” heater. Do not place any object on this heater.

### ■ READ AND SAVE ALL INSTRUCTIONS BEFORE USING.

■ This heater is hot when in use. To avoid burns, do not let bare skin touch hot surface. Unplug and let heater cool down for at least ten (10) minutes before moving it. Use handles, if provided.

■ To reduce the risk of fire, keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9m) from the front, sides and rear of the heater.

■ Extreme caution is necessary when any heater is used by or near children or invalids, and whenever the heater is left operating. Avoid leaving an operating heater unattended.

■ Always unplug from electrical outlet (receptacle) whenever heater is not in use.

■ To disconnect heater, turn control to OFF, then remove plug from outlet (receptacle). **REMOVE BY PULLING ON THE PLUG** — not the cord.

■ Do not operate any heater with a damaged cord or plug or after a malfunction, or after it has been dropped or damaged in any manner. Return heater to the nearest authorized service repair center for examination, electrical or mechanical adjustment or repair.

■ This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may come in contact with water, such as near a bathtub or sink. If the heater does become wet, unplug it from the wall receptacle before touching it, as a wet heater may create an electrical shock hazard even if the heater is turned off.

■ Do not use outdoors.

■ To avoid overheating of the cord, do not cover any part of the cord with carpet, throw rugs, runners, newspapers, magazines, furniture, etc. Arrange cord away from trafficked areas, so it will not be tripped over or stepped on.

■ Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electrical shock, fire or damage to the heater.

■ To avoid a fire hazard, do not cover this heater in any manner. Do not use on soft surface (such as a bed) where openings may be blocked or heater can fall over.

■ A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or other volatile or flammable liquids are used or stored.

■ Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if an extension cord must be used, it shall be of a minimum size of 14 AWG and rated not less than 1500 watts. Use only an extension cord that is UL listed.

- To prevent electrical overload and blown fuses, be sure that no other appliances are plugged into the same outlet (receptacle) or into another outlet (receptacle) wired into the same circuit.
- Do not place the heater near a bed, because objects such as pillows or blankets can fall off the bed and be ignited by the heater.
- Do not use this heater as an integral part of any life support or equipment protection system, where a functional failure or misapplication of the heater could jeopardize the people or things being protected.
- Avoid using heater while sleeping.
- Do not use heater in any other orientation other than upright as shown in this manual.
- Use heater only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury to persons.

## SAVE THESE INSTRUCTIONS

### POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug fits in a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.


### FULL ONE-YEAR WARRANTY

Applica warrants this product against any defects that are due to faulty material or workmanship for a one-year period after the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, we will repair it or elect to replace it free of charge.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Answers to any questions regarding warranty or service locations may be obtained by calling Consumer Assistance and Information: 203-926-3230.



### SAVE THIS USE AND CARE BOOK

## OIL-FILLED HEATER

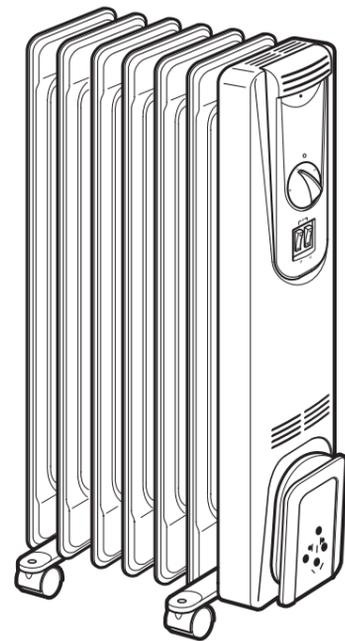

# OPERATING INSTRUCTIONS

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS

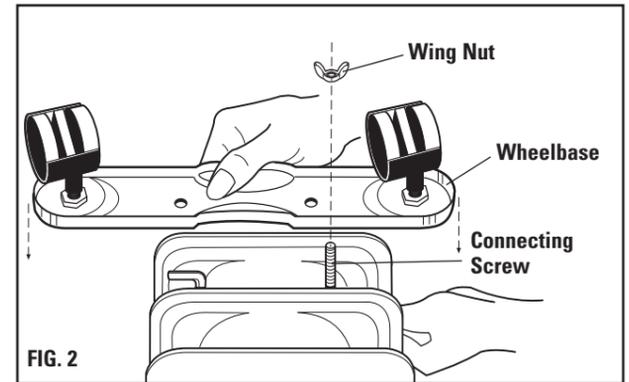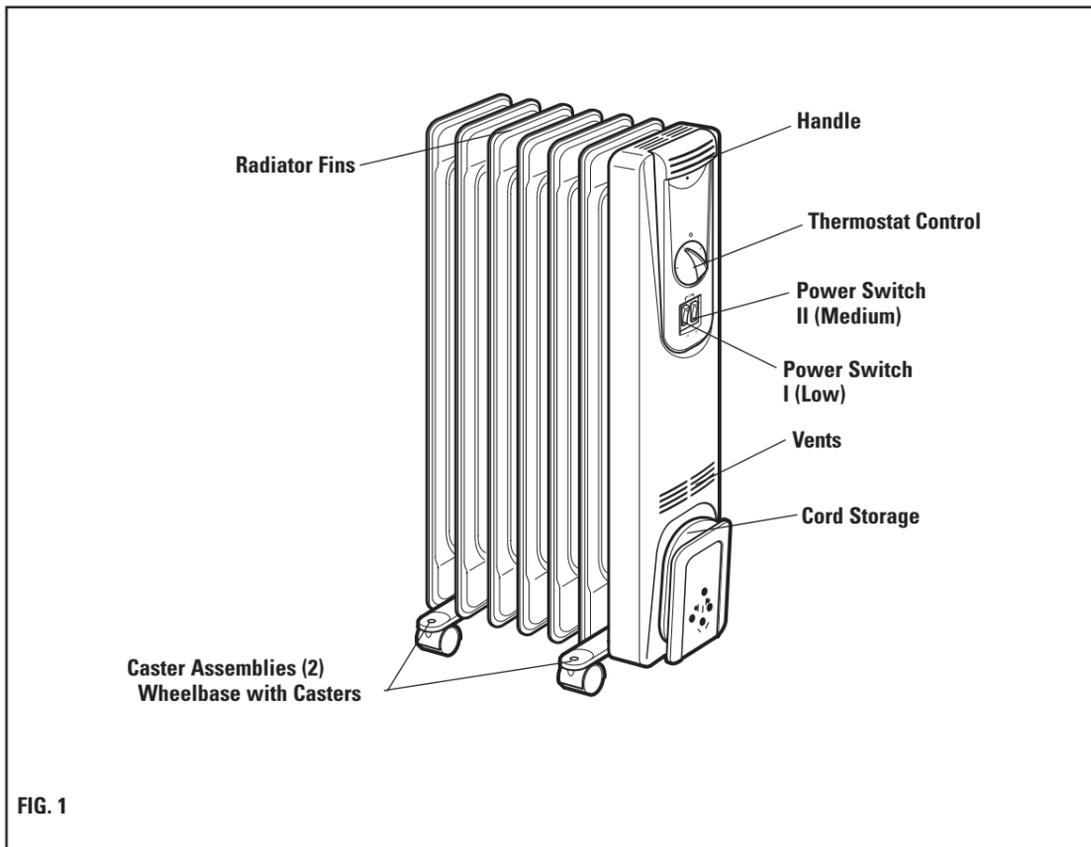

## LINE CORD SAFETY TIPS

1. Never pull or yank on the cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced. The line cord may be replaced by qualified service personnel.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

**DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE, OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.**

## HOW TO USE

This appliance is for HOUSEHOLD USE ONLY. It may be plugged into any AC electrical outlet (ordinary household current). Do not use any other type of outlet.

### SPECIAL ATTENTION:

The use of an extension cord is not recommended. However, if it is absolutely necessary, be sure that the cord is (1) No. 14 AWG minimum size and rated no less than 1500 watts; (2) UL Listed; (3) as short as possible (long cords can overheat, as well as trip circuit breakers); (4) not used for operating more than one appliance at a time.

### CASTER ASSEMBLY INSTRUCTIONS

Heater is packed with two caster assemblies that must be installed between the radiator fins at each end of base pipe to make unit portable and convenient to use.

### TO ASSEMBLE (Refer to Figures 1 and 2)

1. Be sure Heater is unplugged and power switches are Off.
2. Keep cord out of the way by winding it around cord storage on side of unit.
3. Set Heater upside down.
4. Place the two metal connecting screws of caster assembly over base pipe, between radiator fins on one side of heater, so that threads on screws project beyond pipe.
5. Insert one screw into each hole on wheelbase of caster assembly.
6. Fasten wing nut securely on threaded end of each connecting screw.
7. Repeat procedure on other side of unit with the other caster assembly.
8. Set Heater upright and plug in.

### CHOOSING A LOCATION

This heater is intended for use only on the floor.

- This Heater radiates heat in all directions, so always leave ample space around it.
- Do not place too close to a wall or any furniture.
- Keep all combustible materials such as furniture, pillows, bedding, paper, clothes and curtains at least 3 feet away from heater.
- Do not place anything on top of Heater.
- Do not use in wet or moist locations; for example, bathrooms or laundry areas, or in areas where paint or other flammable or volatile liquids are used or stored.

**IMPORTANT:** Close supervision must be maintained at all times when this Heater is used near children or invalids or pets. Do not touch or attempt to move Heater when it is plugged in. Always unplug and allow Heater to cool before handling. NEVER pull unit by the cord. Use the handle provided.

### CAUTION:

Be sure that no other appliances are plugged into the same circuit with this Heater. A circuit overload could occur.

**REMEMBER:** Portable electric heaters are designed for space heating or as a supplementary heat source. They are not intended to be a main source of heat.

### TO USE

This Heater features two power switches with indicator lights plus a thermostat control. (See Figure 1.) It offers three heat settings.

1. Select heat setting.
  - For LOW heat (600 watts), press the switch on the left (I).
  - For MEDIUM heat (900 watts), press the switch on the right (II).
  - For HIGH heat (1500 watts), press BOTH switches (I and II).
2. Once you choose the heat setting, turn the selected thermostat control clockwise as far as it will go. The indicator light on the selected power switch illuminates.
3. Leave the thermostat control at its maximum position until the desired temperature is reached.
4. Carefully lower the thermostat control until the Heater shuts off. (Indicator light goes off.)
5. Leave thermostat control at this position. As the Heater automatically cycles on and off to maintain the chosen room temperature, the indicator light also cycles on and off to indicate when Heater is operating. As long as the selected power switch is on, the Heater operates, even if the indicator light is off.

**NOTE: OIL IN THE UNIT IS PERMANENTLY SEALED. YOU DO NOT NEED TO REFILL IT.**

## CARE AND CLEANING

This appliance contains no user serviceable parts. Refer service to qualified service personnel.

### SPECIAL NOTE:

Before unplugging unit, be sure all controls are in the Off position.

**TO CLEAN:** Always unplug heater from outlet and allow it to cool thoroughly before attempting to clean. Accumulated dust may be removed from heater surfaces with a soft cloth. For more thorough cleaning, use a cloth that has been moistened with a solution of mild detergent and water. Dry the heater casing thoroughly with a soft, dry cloth before operating the unit again. **DO NOT immerse heater in water.**

**TO STORE:** When storing heater during the off season, be sure to keep it in a dry area. Coil the cord around the cord storage at the side of the unit.